



Sony DSC-S75 Instructions for OneShot360

Recommended Camera Settings for OneShot360

- Use the Zoom to exactly fill the digital camera LCD viewer screen with the circular image. This is done by using the zoom on the back of the camera. If you zoom in too much, you will lose part of the field of view. If you zoom in too little, you will not get maximum resolution. Note also that the OneShot360 image may not be exactly centered in the LCD screen – this is normal.
- Make sure the flash is disabled by pressing the flash section (lightening bolt symbol) of the control button located to the left of the LCD screen until you see the “flash off” icon on the LCD.
- To focus your OneShot360 image with the Sony DSC-S75 camera, press the focus button and adjust the jog dial until the desired distance is shown on the LCD panel. We recommend a setting of 3 meters (or 9 3/4 ft.)
- Put your Sony DSC-S75 in aperture priority mode by turning the top mode dial to A mode which is the symbol for aperture priority.
- Adjust the jog dial until the indicator points to the f-stop setting. Press in on the jog dial and rotate it up or down to adjust to an f-stop of 7.1.
- *Note: aperture priority mode may not be suitable for low light or some indoor shooting conditions because the camera will not allow a shutter speed slower than 1/30 of a second while in this mode. This would mean the image would not be properly exposed if using a small aperture. To work around this limitation, you can use shutter priority mode, and use a shutter speed that would give you the desired f#. Also, make sure you are using a tripod when shooting with a slow shutter speed.

Press the MENU button and use arrow buttons to:

- Set the white balance. Auto is usually fine for most shots.
- Set the image size to 2048(3:2) for best quality.
- Set the Sharpness to “0” for best compromise between tonal range and contrast.
- Select the self timer by using the bottom arrow. To start the timer depress the shutter release button. Pressing the bottom arrow again will shut the timer off.

Contact:

Metropole360

Email: support@metropole360.com

Web: <http://www.metropole360.com>

Phone: 212-980-2427